




A - Presentation Mode

HDMI: Insert the cable in your computer



OR Clickshare: Insert the dongle into your computer and push on the button

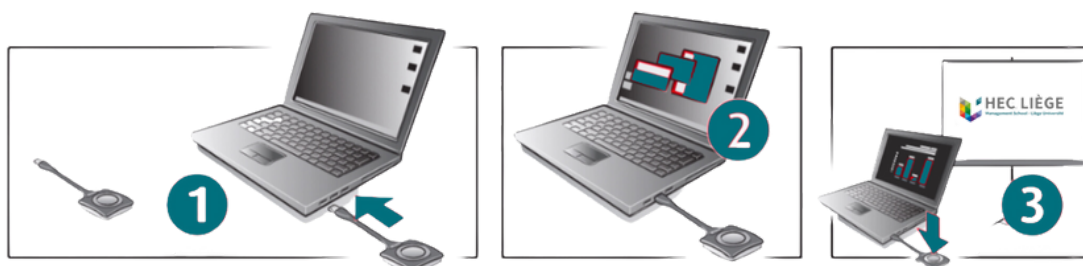

B - Videoconference Mode

- Insert the **HDMI** cable or the **Clickshare** button, AS WELL AS the **USB cable**, into your computer.
- In your videoconference application (Teams, Zoom,...):
 - Go to video settings and select "*Huddly IQ*" for the camera.
 - Go to audio settings and select "*Crestron UC Soundbar*" for speaker and microphone.



C - Troubleshooting

No image? Check if the screen is turned on.



No sound? Check if the correct output device is selected (Sony TV or Clickshare Speaker).

